




Inspect Your Panels

After receiving your order, please inspect each panel for any defects and double-check that you have received the correct number of panels for your project. If there are any issues, DO NOT INSTALL and please contact us immediately.



Prep your Wall

Before hanging, make sure that your wall is clean, dry, and smooth. Old wallpaper needs to be completely removed. Fill any holes, sand down bumps, and remove electrical coverings. Please be sure that your walls are primed and completely dry for better installation and to ensure that any colored paint cannot be seen through your new wallpaper.

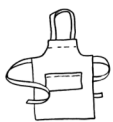

Gather Your Supplies

Measuring tape / Scissors / Plastic Sheeting / Pump Sprayer or Spray Bottle / Bucket / Natural Sponge / Pencil / Level / Craft Knife or Exacto Knife with extra blades / PLASTIC Wallpaper Smoothing Tool / Step Ladder (depending on the height of your wall) / Work Table (optional) / Apron or clothing with pockets to keep small tools handy while you work (optional).



Step 1. Mark Your Starting Point

Our prepasted wallpaper panels are 24" wide. Starting from the left corner of your wall, measure the width of the wallpaper panel minus a half inch (to allow for trimming on the left wall edge) and mark with a pencil.

Using a level, draw a straight, vertical line up and down from your pencil mark. This line will be your guideline as to where you should line up the right side of panel 1.

Step 2. Activate the Paste

Place your panel glue side up. Using an automatic pump sprayer or spray bottle, saturate the wallpaper with water to activate the adhesive.

Gently fold both ends, paste side in, towards the center of the strip, without creasing the folds. This is known as "booking". Book your panel for up to one minute. It's best to avoid booking no longer than three minutes. Folding the panel in this way makes it easier to walk up to your wall and start applying.

Step 3. Position the First Panel

Standing at your wall, unfold the top half of the wallpaper, leaving the bottom half of the wallpaper booked, and position the glue-exposed portion of the top of the wallpaper on the wall.

Line up the strip with your hand-drawn line, allowing for an inch on the top for trimming.

Once you're satisfied with the initial positioning, unfold the wallpaper to expose the remaining glued surface. Using a smoothing tool, smooth downward and outward.

Step 4 Apply and Smooth

Repeat steps 2 and 3 for the remaining panels, making sure that you are booking your panels for the same amount of time as your other panels.

Note: If you must straighten a panel or rearrange it, you have about ten minutes to do so. The adhesive will become too strong after ten minutes. Please be sure that you are installing your panels in the correct order before you saturate the back of the wallpaper.

Tip: Do not over-smooth the paper – bubbles smaller than the size of a U.S. quarter (about 24 mm in diameter) will dissipate as the wallcovering sets.




Step 5. Trim the Edges

Using a wallpaper smoothing wool and craft knife, carefully trim the top and bottom.

You may need to change the blade on your craft knife; it is important to keep the blade edge very sharp to minimize any risk of tearing the paper.

Step 6 Smooth & Wipe

Gently hug the seams together, but do not push the wallpaper too hard. Smooth out all air bubbles. Wipe with warm water and a sponge, taking care to remove all the paste from the seams. After hanging two strips, be sure to check again for any defects and contact us if any are found.

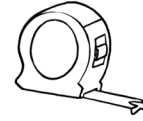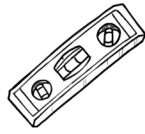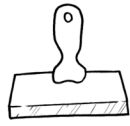

AREA ENVIRONMENTS DO'S AND DON'TS

DO'S

Use a real, natural sponge to wipe down your paper. Natural sponges work much better than cellulose.

Layout your panels before installation, and plan out how you will place the panels on your wall. Check for defects ahead of time.

Utilize the buddy system!
Wallpaper is much, much easier to install with a friend.

Have fun and enjoy your beautiful new wall mural.

DON'TS

Don't use any metal tools or abrasive sponges to smooth the panels. Harsh tools will damage the paper.

Don't forget to use a plastic sheet on your floors while installing. The plastic sheet will protect your floors or rugs from any water that may end up there.

Don't be shy about saturating your panels when booking. A lightly sprayed panel will not adhere as well as a saturated panel.